

KRUGER

General Instructions **IJM Series**



IGB038.E2/2002



This manual is to guide the users in the proper storage, installation, operation and maintenance procedures to ensure maximum equipment life and trouble-free operation. **HANDLING AND MAINTENANCE SHOULD ALWAYS BE PERFORMED BY EXPERIENCED AND TRAINED PERSONNEL.**

RECEIVING, HANDLING AND STORAGE

Rough handling during shipment and improper storage can cause damage which is difficult to notice until the fan is in operation. This can be avoided with proper storage and handling techniques.

Fan should be hoisted with slings placed around the fan housing. Touch up the scratched coated surfaces during lifting, to prevent corrosion to occur at this area. Store the fan in a clean and dry place, preferably indoors to ensure motor shaft, bearing and fan casing are protected against dust and corrosion. Do not store the fan in a location where it will be subjected to vibration. This can cause the internal surfaces to rub against each other and damage the bearings.

START-UP CHECK LIST

Before putting any fan into initial operation the manufacturer's instruction must be followed. Complete the following checklist to make sure that the fan is ready to run.

- Lock out the primary and all secondary power sources.
- Make sure the mounting arrangement is adequately designed in accordance with recognized acceptable engineering practices and with the fan manufacturer's recommendations.
- Check and tighten all hold-down (securing) bolts.
- Properly secure the protection net.
- Switch on the electrical supply and allow the fan to reach full speed.
- Check carefully for :
 - (1) Excessive vibration
 - (2) Unusual noise
 - (3) Proper amperage and voltage values

If any problem is indicated, switch off the fan IMMEDIATELY. Lock out the electrical supply, check carefully for the cause of the trouble and correct as necessary.

The fan may now be put into operation but during the first 8 hrs of running, it should be periodically observed and checked for excessive vibration and noise. Inspection should be made on input current and fan housing temperature and make sure they do not exceed the manufacturer's recommendation. After 8 hrs of operation, the fan should be shut down to check the following items:

- (1) All set screws and hold-down bolts
- (2) Fan housing temperature


INSTALLATION

The construction of the IJM series Jet fans enables them to be fitted anywhere into the ductless system.

Firstly, fix the support bracket assembly in position where the Jet fan is to be located. It is recommended that the fan to be installed at least one meter calculated from away from obstructions inlet & outlet. The fan body should then be fixed to the support by tightening the fixing screws.

In order to avoid losses in efficiency and performance, it is recommend that the fan be installed with a distance of 2.5D between fan inlet and the ceiling.

Installation Method

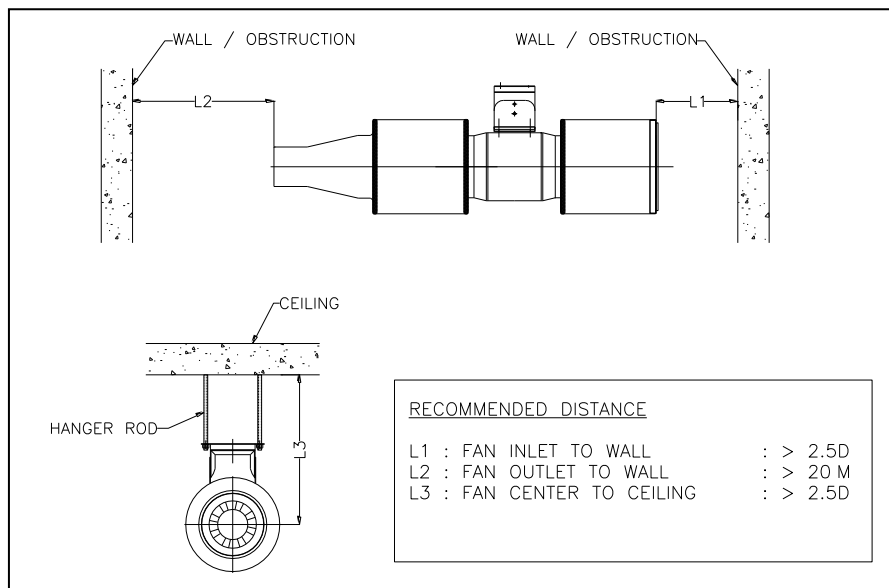

WIRING

Warning: The appliance must be earthed.

1. The Jet fan is equipped with a single phase motor which should be connected to a single phase mains supply of the voltage and frequency given on the rating plate.
2. There should be a double pole isolator switch (min. air gap 3mm) in the supply wiring to the unit.
3. The Jet Fan is fitted with a two-speed motor. Therefore the fan can also be speed controlled.
4. A terminal box is incorporated to provide easy installation. The connection should be made according to Fig. 1
5. It is advised not to remove any components, as any tampering would automatically cancel the KRUGER guarantee.

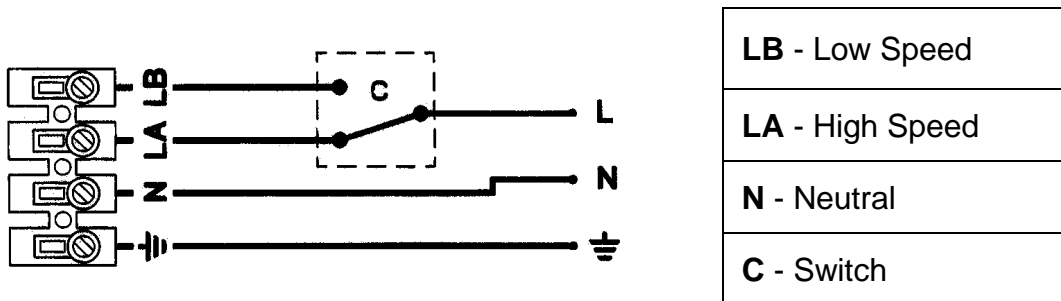


Fig. 1

TROUBLE-SHOOTING

Fan is developing or emitting abnormal or excessive noise

Possible cause	Remedy
<ul style="list-style-type: none"> • Impeller/inlet dirty or clogged • Incorrect speed of impeller 	<ul style="list-style-type: none"> • Clean the impeller or inlet • Check power supply, frequency

Required air volume not achieved
Fan does not start or operate

Possible cause	Remedy
<ul style="list-style-type: none"> • Impeller/inlet dirty or clogged • Incorrect speed of impeller 	<ul style="list-style-type: none"> • Clean the impeller or inlet • Check power supply, frequency

Possible cause	Remedy
<ul style="list-style-type: none"> • Blown fuses • Electricity shut off • Wrong voltage • Low voltage, excessive line drop or inadequate wire size 	<ul style="list-style-type: none"> • Check fuses/circuit breakers • Check for switched off or disconnected • Check for correct power supply • Check for correct wire size

ROUTINE MAINTENANCE

Maintenance should always be performed by experienced and trained personnel. Do not attempt any maintenance on a fan unless the electrical supply has been locked out or tagged out and the impeller has been secured.

Under normal circumstances, when handling clean air, the system should require cleaning only about a year. However, the fan and system should be checked at regular intervals to detect any unusual accumulation.

The fan impeller should be specially and checked for build-up of material or dirt which may cause an imbalance result in undue wear on bearings. A regular maintenance program should be established to prevent material build-up.

Periodic inspection of the rotating assembly must be made to detect any indication of weakening of the rotor because of corrosion, erosion, or metal fatigue.

KRUGER GROUP (VENTILATION)

• THAILAND (Regional HQ)

KRUGER VENTILATION INDUSTRIES ASIA CO. LTD.
30/159 Moo 1, Sinsakorn Industrial Estate,
Chetsadawithi Road, Khok Kham Mueng, Samuthsakorn 74000, Thailand
Tel. +662 1054298 - Fax +662 0248256-9
Website: www.krugerfan.com

• CHINA (BEIJING)

BEIJING KRUGER VENTILATION CO. LTD
Level 7, A Block, Rising International Building, 29 JingHai San Road, BDA,
Beijing, P.R.China 100176
Tel. +86 10-67881366 - Fax +86 10-67880566
Email: krugertj@krugertj.com

• CHINA (SHANGHAI)

SHANGHAI KRUGER VENTILATION CO. LTD
No. 500 Yuanguo Road, Anting, Jiading,
Shanghai 201814 P.R. China
Tel. +86 21-69573266 - Fax +86 21-69573296
Email: shkruger@krugerchina.com

• CHINA (WUHAN)

WUHAN KRUGER VENTILATION CO. LTD
No. 805, Huian Ave, Dongxihu District, Wuhan, Hubei, P.R. China 430000
Tel. +86 27- 83248840/83060522/83097505
Fax +86 27- 83261886
Email: whkruger@krugerwh.com

• HONG KONG

KRUGER VENTILATION (HONG KONG) LIMITED
Flat C, 9/F, Yeung Yiu Chung (No.8) Industrial Building,
20 Wang Hoi Road, Kowloon Bay, Kowloon, Hong Kong
Tel. +852 22469182 - Fax +852 22469187
Email: info@kruger.com.hk

• INDIA (NORTH)

KRUGER VENTILATION INDUSTRIES (NORTH INDIA) PVT LTD
Plot No. - 191, Sector - 59, Ballabgarh, Faridabad - 121 004, Haryana, India
Tel. +91-9958991660/9717449696
Fax. +91-1294135820
Email: sales.kni@krugerindia.com

• KOREA

NEOMATE CO. LTD
2-1010, Ace High Tech City B/D, 775 Gyeongin-ro,
Yeongdeungpo-gu, Seoul, Korea. Postal Code 07299
Tel. +82-2-2679-2052 - Fax. +82-2-2679-2174
Email: y7890@neomate.co.kr

• MYANMAR

KRUGER VENTILATION (MYANMAR) CO.LTD
Room No. F21, Thiri Yadanar Whole Sale Market, (Htawunbe)
Toe Chae Ward, North Okkalapa Township, Yangon.
Tel. +959 763141081/2/3
Email: htoon@krugermm.com

• SINGAPORE

KRUGER ENGINEERING PTE LTD
No. 10 Buroh Street #06-06, West Connect Building,
Singapore 627564
Tel. +65 68631191 - Fax +65 68631151
Email: mktg@krugerasia.com

• THAILAND

KRUGER VENTILATION IND. (THAILAND) CO. LTD
30/105 Moo 1, Sinsakorn Industrial Estate,
Chetsadawithi Road, Khok Kham Mueng, Samuthsakorn 74000, Thailand
Tel. +662 1050399 - Fax + 662 1050370-2
Email: mktg@kruger.co.th

• AUSTRALIA

S&P-KRUGER AUSTRALIA PTY LTD
2 Cunningham St, Moorebank N.S.W. 2170
Tel. +61 2-98227747
Fax. +61 2-98227757
Email: info@sandpkruger.com.au

• CHINA (GUANGZHOU)

GUANGZHOU KRUGER VENTILATION CO. LTD
No. 9 Huahui Road, Huashan, Huadu,
Guangzhou, P.R. China 510880
Tel. +86 20-66356635 - Fax +86 20-86786001/86786500
Email: gzkruger@krugergz.com

• CHINA (TIANJIN)

TIANJIN KRUGER VENTILATION CO. LTD
No.168 Anyuan Road, Jingjin Science and Technology Park
Wuqing District, Tianjin, China
Tel. +86 22-22143480/3481 - Fax +86 22-22143482
Email: krugertj@krugertj.com

• DUBAI

KRUGER VENTILATION INDUSTRIES, GULF BRANCH
Jebel Ali Free Zone Area (JAFZA) P.O. Box No. 262949, Dubai, UAE
Tel. +971 4 8819188/8832017
Fax. +971 4 8832018
Email: johncs@krugerasia.com

• INDIA

KRUGER VENTILATION INDUSTRIES (INDIA) PVT LTD
Kruger Centre, Mumbai-Nasik Highway,
Kalamgaon, Shahapur, Thane 421601, Maharashtra, India
Tel. +91 9960558899/9975577211 - Fax +91 2527 240075
Email: sales@krugerindia.com

• INDONESIA

P.T. KRUGER VENTILATION INDONESIA
Jl. Teuku Umar No.20,
Karawaci - Tangerang 15115, Indonesia
Tel. +62 21-5512288/5513557 - Fax +62 21-5513502
Email: mktg@krugerindo.co.id

• MALAYSIA

KRUVENT INDUSTRIES (M) SDN BHD
Lot 850, Jalan Subang 7, Taman Perindustrian Subang,
47500, Subang Jaya, Selangor D.E.
Tel. +603 80743399 - Fax +603 80743388
Email: mktg@kruger.com.my

• PHILIPPINES

KRUGER M&E INDUSTRIES CORPORATION
FAPI Compound, E. Rodriguez Ave.
Tunasan, Muntinlupa City 1773, Philippines
Tel. +63 2-8622892/4/6/7, 5534059 - Fax +63 2-8622891
Email: mktg@krugerph.net

• TAIPEI

KRUGER VENTILATION (TAIWAN) CO. LTD
No. 157, Ping-an Rd, Hengfeng Village,
Dayuan Shiang Taoyuan County 337, Taiwan
Tel. +886 3-3859119 - Fax +886 3-3859118
Email: sales@krugertwn.com.tw

• VIETNAM

KRUGER VENTILATION INDUSTRIES (VIETNAM) CO. LTD
Lot A7. 2-4, C2 Road, Thanh Thanh Cong IZ,
Trang Bang Dist. Tay Ninh Province, Vietnam
Tel. +84-276 3585200/01/02 - Fax +84-276 3585199
Email: mktg@krugervn.com